

1239 Commons Court
Clermont, FL 34711
www.amazuluinc.com



(352)243-5309
(352)243-5361

Installation Instructions Thatched Umbrella 9' diameter umbrella w/ Eucalyptus pole

Important Notice:

These instructions contain important safety and general instructions. Reading these instructions prior to attempting assembly will greatly simplify the procedure.

Tools Required:

- Ladder
- Sharp Utility Knife
- Ratchet Set/wrench (specifically 1/4")
- Protective Eye Wear
- Drill with 3/16" bit
- Spirit level

Caution:

Use care when climbing your ladder. Ensure that it has stable footing before use. Be careful when handling the thatch panels. Make sure to wear safety glasses to avoid injury to your eyes from the thatch ends.

Materials List:

- 4x Galvanized steel frame sections w/ 4 rungs each
- 4x 30-1/2" long umbrella struts
- 1x Thatched top-cone
- 18x Thatch panels
- 2x Heavy-duty thatch panel
(**Important: keep heavy duty panels separate from regular panels**)
- 1x 3-4" dia. eucalyptus pole
- 16x Sets of nuts and bolts
- 4x Eye lag screws

1239 Commons Court
Clermont, FL 34711
www.amazuluinc.com



(352)243-5309
(352)243-5361

Assembly Instructions:

I. Installation of Post

The galvanized steel Thatch Umbrella is a heavy umbrella and we suggest that you ensure that you create a solid foundation for the post. We suggest a minimum of a 1' x 1' x 2' deep concrete foundation. Please allow for the extra 2' length of post when calculating your post lengths.

- 1) Calculate your post length:
 - a) Your post length above ground should be 8'-5"
 - b) Add to this the depth of the foundation (minimum 2')
 - c) This gives your total post length. Cut posts to this size.

NOTE:

A 8'-5" above ground post length will yield a 6'-4" clearance from the ground to the edge of the thatch. While this is a standard clearance height, please check your local building codes to make sure you meet the requirements of your area.

- 2) Digging and installing post
 - a) At post location, dig your 1' x 1' x 2' deep (min) hole.
 - b) Make sure your post is the desired length and then place it in the center of the hole.
 - c) Pour a concrete mixture around the post.
 - d) Using your spirit level, make sure the post is perfectly upright.
 - e) Allow ample time for concrete to set before proceeding.


TIP: *brace the pole with spare timber to ensure that the pole remains perfectly vertical while the concrete dries.*

1239 Commons Court
Clermont, FL 34711
www.amazuluinc.com




(352)243-5309
(352)243-5361

II. Assembly of Frame

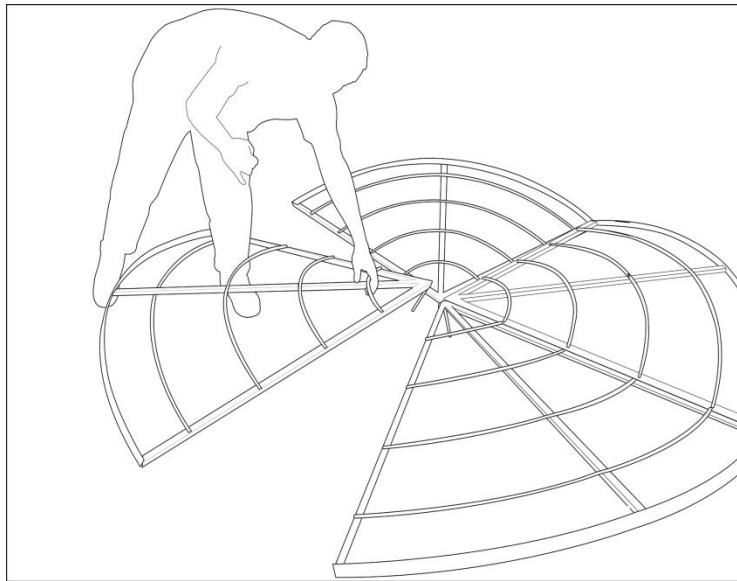

- 1) On a flat and level piece of ground, lay out the 4 galvanized steel frame sections in a 'pie' shaped layout.

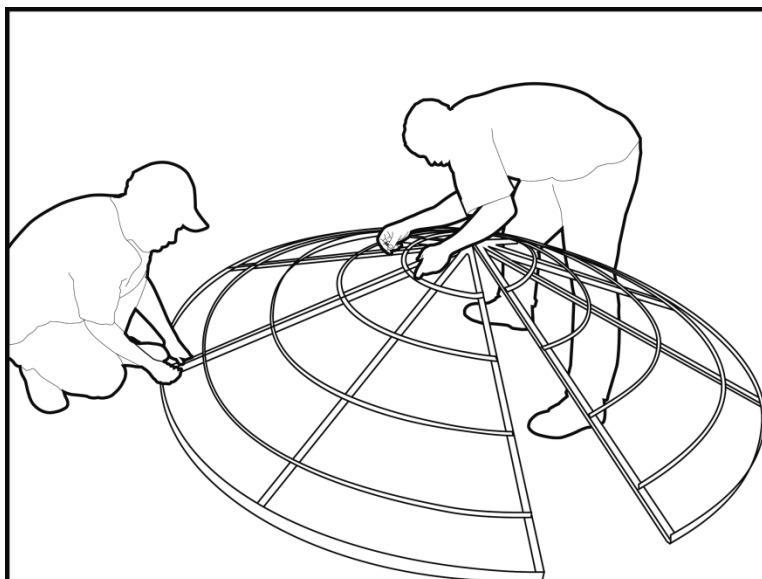


1239 Commons Court
Clermont, FL 34711
www.amazuluinc.com




(352)243-5309
(352)243-5361

- 2) Push the sections together to create an umbrella/cone shape.
- 3) Loosely bolt the sections together one at a time.

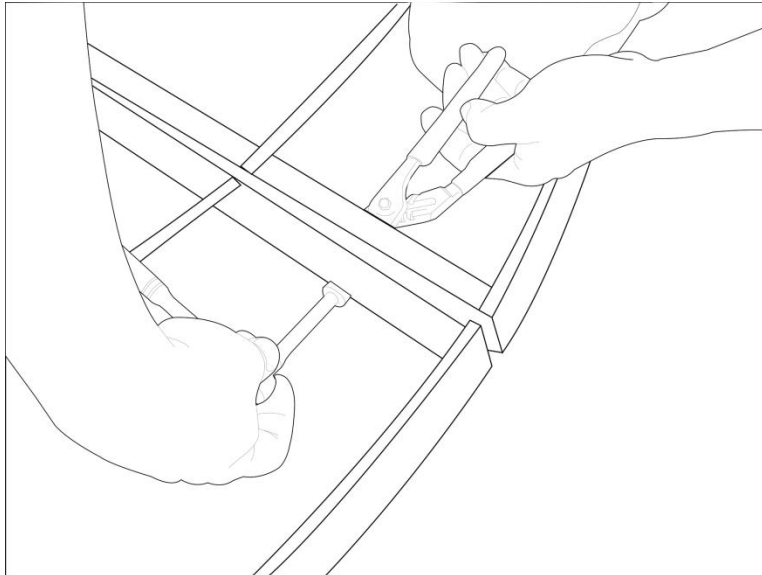

- 4) Once all the bolts have been placed into their relevant holes, you must tighten them to make the entire frame completely rigid.

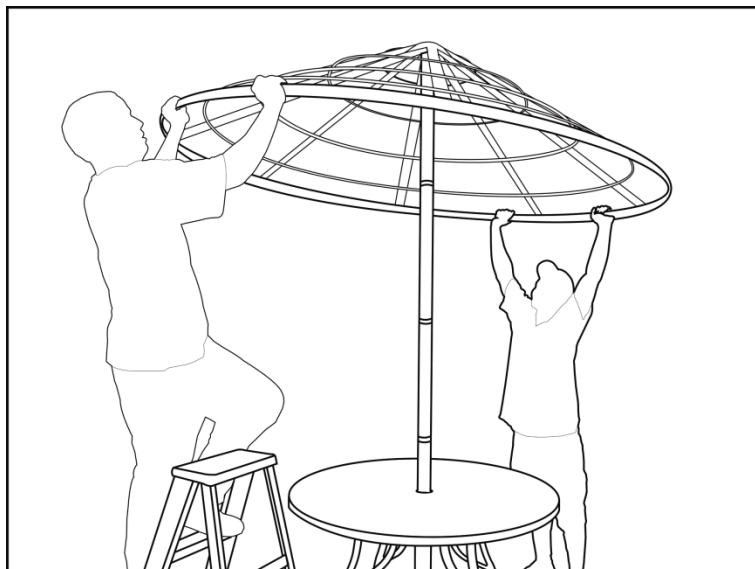


1239 Commons Court
Clermont, FL 34711
www.amazuluinc.com



(352)243-5309
(352)243-5361

- 5) After the frame has been completely assembled, use 2-3 people to lift the frame onto the post. Make sure pins are properly slotted into the top of the post

III. Strut Assembly

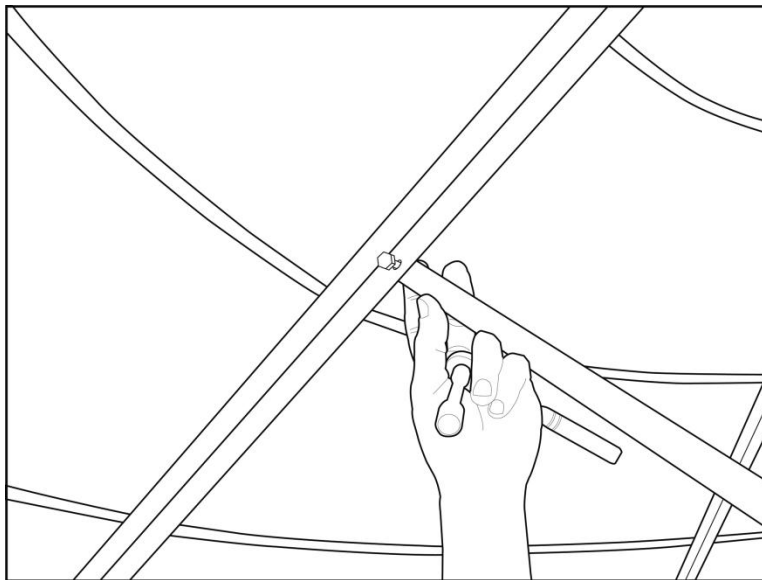


- 1) Loosely attach each strut to the middle bolt on each frame section.
(Important: One end of each strut is mitered to fit specially into the frame. Be sure to place this end on the frame.)
- 2) Once all struts are bolted, select one strut and slowly swing it toward the post. Take care that the strut does not swing back and hit anyone.
- 3) While making sure the umbrella is sitting evenly on the top of the post, mark where the strut touches the post with a pencil.
- 4) Repeat this process for each strut.
- 5) Now drill a guide hole at each marked-off location on the post. A 1" deep hole is adequate.

1239 Commons Court
Clermont, FL 34711
www.amazuluinc.com




(352)243-5309
(352)243-5361

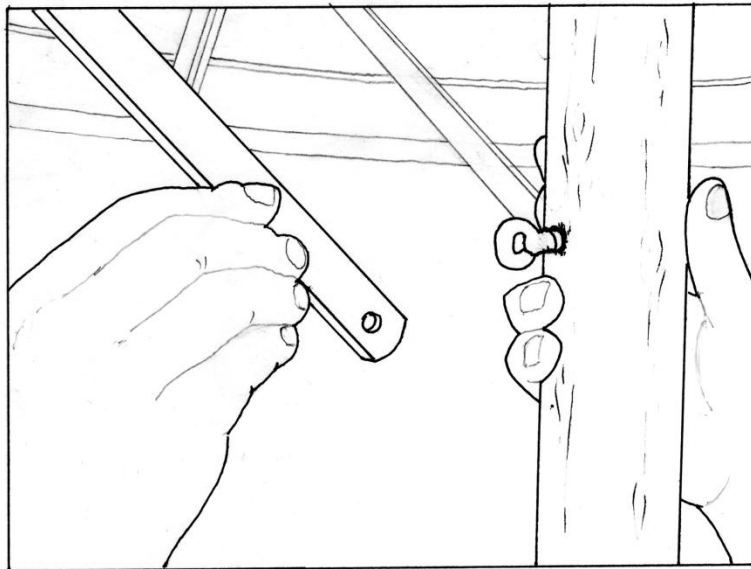

- 6) Screw each eye lag screw into the post. The “eye” of the bolt should be vertically aligned so that the strut will be able to be attached.
- 7) One by one loosely bolt struts to the eye lag screw in the post.
- 8) Once all struts are bolted to the post, step back once again to make sure the frame is not crooked.
- 9) Adjust the frame as needed, then tighten all the bolts on the strut.

IV. Installation of the Thatch

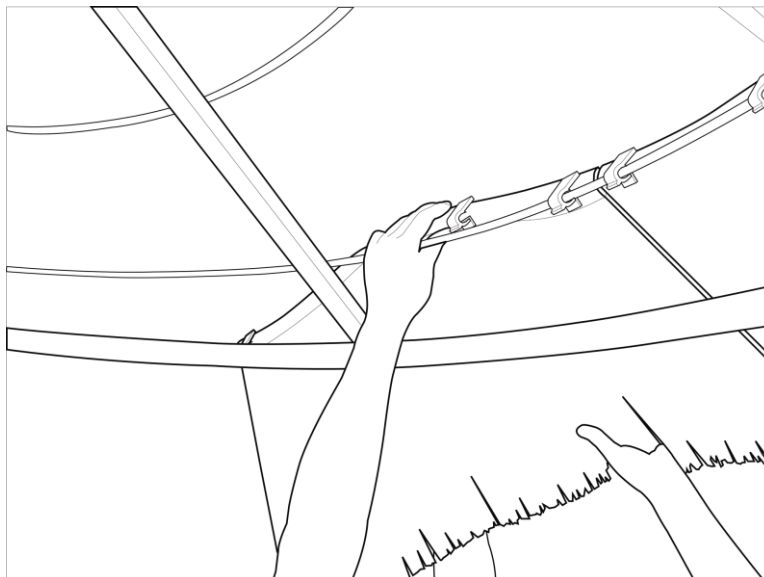


1239 Commons Court
Clermont, FL 34711
www.amazuluinc.com



(352)243-5309
(352)243-5361

- 1) Starting at the lowest rung (not the flat outer edge), clip on the thatch panels.
 - a) The rungs will take increasingly less panels as you work up the umbrella. The first rung will take 8, the second 6, and finally 4 panels on the second to last rung.
 - b) Take care in placing the panels, and you will be able to clip them all on with only the final panel of each row needing to be trimmed.
- 2) Now use the 2 Heavy Duty Panels on the last rung. These panels are denser, and will take the tighter radius of the top rung.
(Important: Take care when you trim these panels. The tighter radius of the top rung can be more challenging to work with).

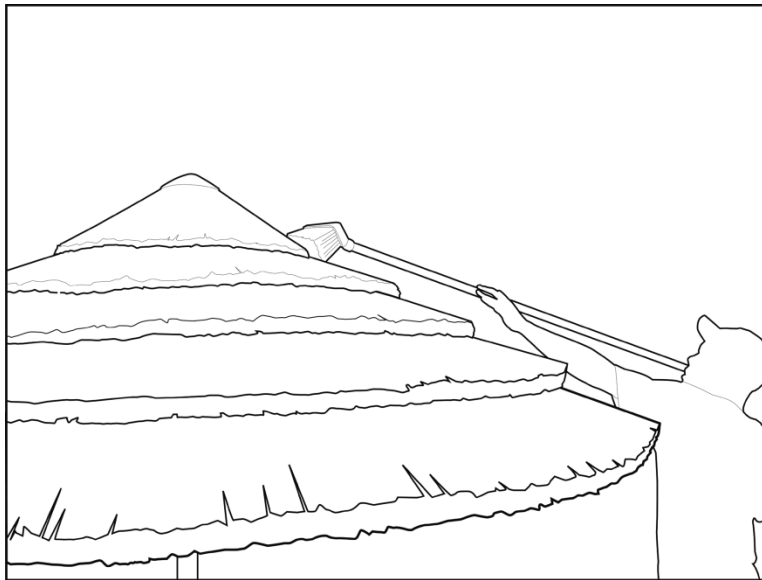

- 3) Finally the top cone is placed centrally on top of the umbrella. Take a step back to make sure it isn't crooked, and then tightly tie the top cone to the frame using the embedded strips in the top cone.
TIP: you can use a broom handle to help position the top cone properly.
- 4) Once all the thatch has been clipped onto the frame, place the ladder underneath the umbrella and gently pat the underside of each panel--lifting it slightly off the frame. This process will allow the thatch to settle evenly.
- 5) Then move the ladder to the outside of the frame and remove any loose pieces of thatch.

Your umbrella is now completed, so sit back, relax, and enjoy!